


CONGRATULATIONS ON THE PURCHASE OF
YOUR

NZ MADE EDEN 6 DRAWER LOWBOY INSTRUCTION MANUAL

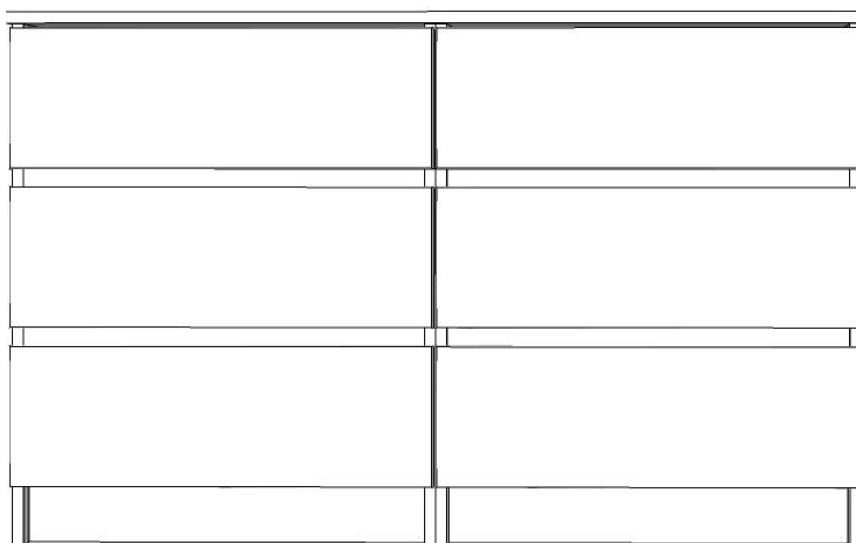

0800 100 858

DID YOU KNOW.....

.....your furniture is manufactured right here in New Zealand - by New Zealanders, for New Zealanders. Honest Kiwi Quality that is backed by our signature 5 Year Guarantee*. If by any chance you have a problem during this period, OUR promise to YOU is that we will repair or replace. Additionally, being based right in here New Zealand our experienced team's expertise is near at hand; if you have any problems at all during the assembly process, you can give us a call on our Freephone number (0800 100858) or email us at sales@compacfurniture.co.nz during normal working hours and we will be happy to step you through the process.

Constructed from NZ made MDF, a renewable resource from sustainably managed pine forests. This means you can have complete confidence that with This white bedroom collection, you are making an environmentally responsible choice.

If you have any questions please visit www.compacfurniture.co.nz or call the manufacturers direct on 0800 100 858.

WHERE TO ASSEMBLE YOUR Cabinet

Assemble your Lowboy on a clean and smooth surface, free of anything which may damage the finished surfaces. A clean, carpeted floor is ideal. If assembling on a workbench or table we suggest you cover it with the carton the Lowboy was packaged in.

Warning! Never leave hardware parts where children can reach them. Small parts may be a choking hazard!

*5 YEAR GUARANTEE

Your furniture carries a **5-year guarantee** against defective material or workmanship, excluding misuse and normal wear and tear. As this unit is customer-assembled our guarantee does not cover cabinet failure or damage from incorrect assembly. **All claims need proof of purchase – please keep a copy of your receipt.**

Follow the assembly instructions carefully and take note of the precautions below.

- **Avoid direct sunlight wherever possible.**
- **Keep cabinet in a dry place.**
- **Wipe off spilt liquids immediately.**
- **Avoid placing hot items directly on the surface.**
- **Clean with a slightly damp cloth and buff dry with a soft dry cloth - microfibre is ideal.**
- **Do not allow nail polish, removers, deodorant or other damaging chemicals to come into contact with the surface.**

PARTS LIST

Please check you have all the necessary parts before beginning to assemble your cabinet. The measurements provided will help you to identify each part. If any parts are missing or damaged please contact the manufacturers directly, either via our website or our 0800 number. Do not call the store you bought the cabinet from as they will be unable to help you.






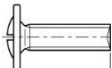
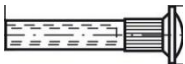
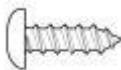

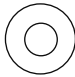




QTY	PART NAME	MEASUREMENTS	NOTES
1	Top	1143 x 396 x 15	Finished on one side. <i>Blue mark.</i>
1	LH End	699 x 378 x 15	Finished on both sides. <i>Green mark.</i>
1	RH End	699x 378 x 15	Finished on both sides. <i>Red mark.</i>
2	Toeboards	538 x 80 x 15	Finished on one side.
2	Back Rails	538 x 80 x 15	Plain MDF.
4	Drawer Rails	539 x 50 x 15	Finished on one side.
6	Drawer Fronts	564 x 189 x 15	Finished on one side.
6	LH Drawer Sides	340 x 135 x 12	Plain MDF. <i>Green mark.</i>
6	RH Drawer Sides	340 x 135 x 12	Plain MDF. <i>Red mark.</i>
6	Drawer Backs	488 x 130 x 12	Plain MDF.
6	Drawer Bottoms	498 x 339 x 4	Plain MDF.
1	Back Panel	644 x 1126 x 4	Plain MDF.
1	LH Division	699 x 362 x 15	Finished on both sides. <i>Green mark.</i>
1	RH Division	699 x 362 x 15	Finished on both sides. <i>Red mark.</i>

COLOUR CODING

To help identify the parts, the main components are colour coded with a pen mark on the back edge of the panel. (The unfinished edge.)


- **RED** **Right Hand Parts.** (E.g. RH End, RH Division, RH Drawer Side.)
- **GREEN** **Left Hand Parts.** (E.g. LH End, LH Division, LH Drawer Side.)
- **BLUE** **Tops**

HARDWARE LIST

QTY	PART NAME	ASSEMBLY CODE	PICTURE
CABINET HARDWARE			
24	Connecting Bolts	H1	
24	15mm Cams	H2	
24	Large Dowels	H15	
6	Metal Drawer Slide sets	H21	
8	Nail on Glides	H37	
2	15mm Connector Screw		
2	Connector Sleeve		
4	Pan Head Screw	H7	
1	Safety Strap		
2	Washer		
DRAWER HARDWARE			
12	Large Dowels	H15	
16	Small Cams	H3	
24	Small Screws	H6	
28	Gold Screw	H9	

CAM INSTALLATION & OPERATION GUIDE

The Cam and Connecting Bolt system is used to put your unit together. Below is an explanation of how this system works.

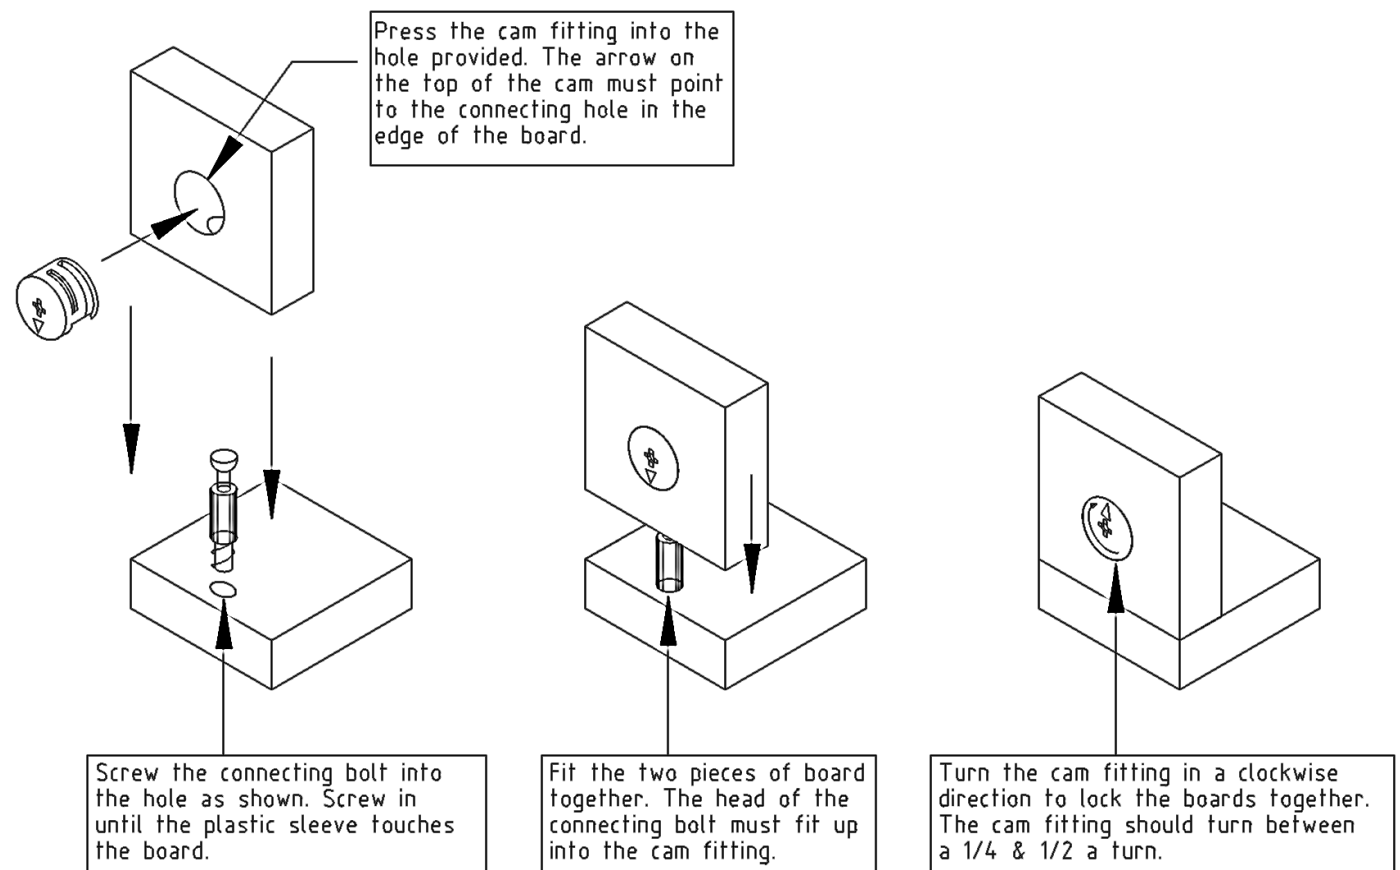

To see a demonstration, click on the assembly assistance tab at www.compacfurniture.co.nz.

DRAWER SLIDES GUIDE

Your pack will contain 5 sets of Metal Drawer Slides. These are bundled together with adhesive tape. Each set comprises of 4 components. Undo the tape on one set at a time and separate the parts.




LEFT HAND PART (**DL**)



RIGHT HAND PART (**DR**)

The Drawer Slide components shown *above* are attached to the **drawer**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later on.

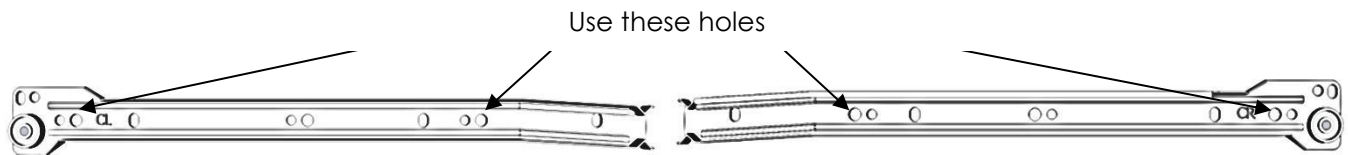

LEFT HAND PART (**CL**)


RIGHT HAND PART (**CR**)

The Drawer Slide components shown *above* are to be attached to the **cabinet**. They have letters **CL** or **CR** stamped on them to indicate left hand or right-hand components. You will need these for steps 2 and 3.

INSTALL THE HARDWARE

STEP 1 – LH End & RH Division


- Lay the **LH End** on a smooth clean surface with holes facing upwards.
- Attach five **LH Drawer Slides (CL)** to the LH End using the **H4 Drawer Slide Screws**. Use the holes as indicated in the diagram below - each slide requires two screws. Ensure that the end of the Slide with the wheel faces towards the finished edge of the LH End.
- Insert two **H2 Large Cams** as shown in diagram. Ensure the arrow on the top of the Cam points towards the top edge of the End.
- Push two **H15 Dowels** into the top edge of the End.
- Screw three **H1 Connecting Bolts** into the holes indicated on the diagram below.
- **Repeat this process for the LH Division.**

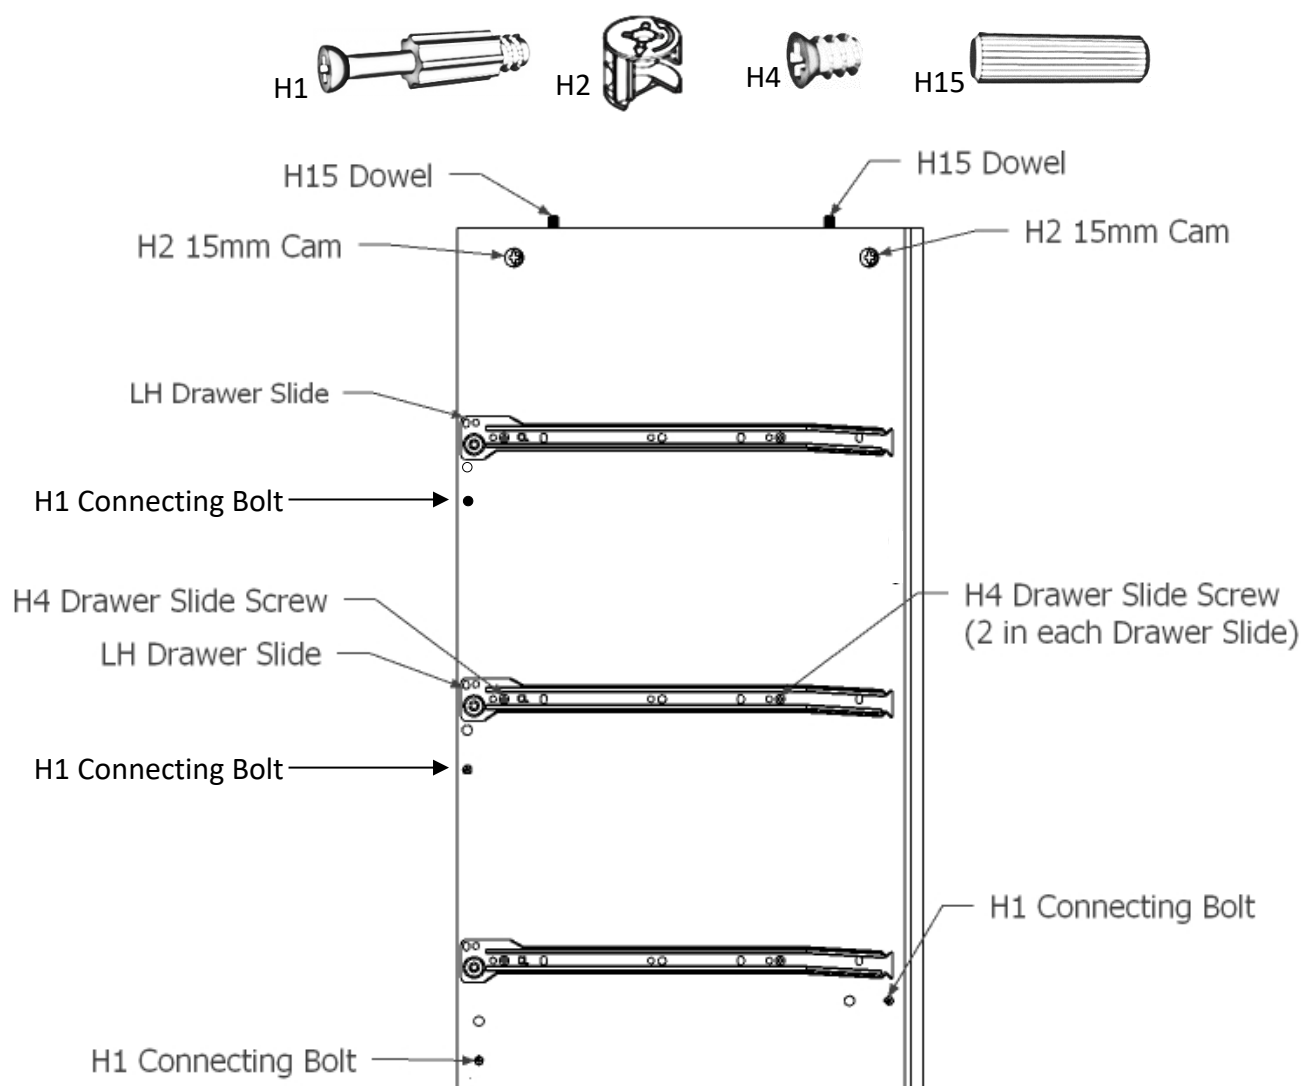

THE EDEN COLLECTION

STEP 2 – RH End & LH Division


- Lay the **RH End** on a smooth clean surface with holes facing upwards.
- Attach five **RH Drawer Slides (CR)** to the RH End using the **H4 Drawer Slide Screws**. Use the holes as indicated in the diagram below - each slide requires two screws. Ensure that the end of the Slide with the wheel faces towards the finished edge of the LH End.
- Insert two **H2 Large Cams** as shown in diagram. Ensure the arrow on the top of the Cam points towards the top edge of the End.
- Push two **H15 Dowels** into the top edge of the End.
- Screw three **H1 Connecting Bolts** into the holes indicated on the diagram below.
- **Repeat this process for the RH Division.**

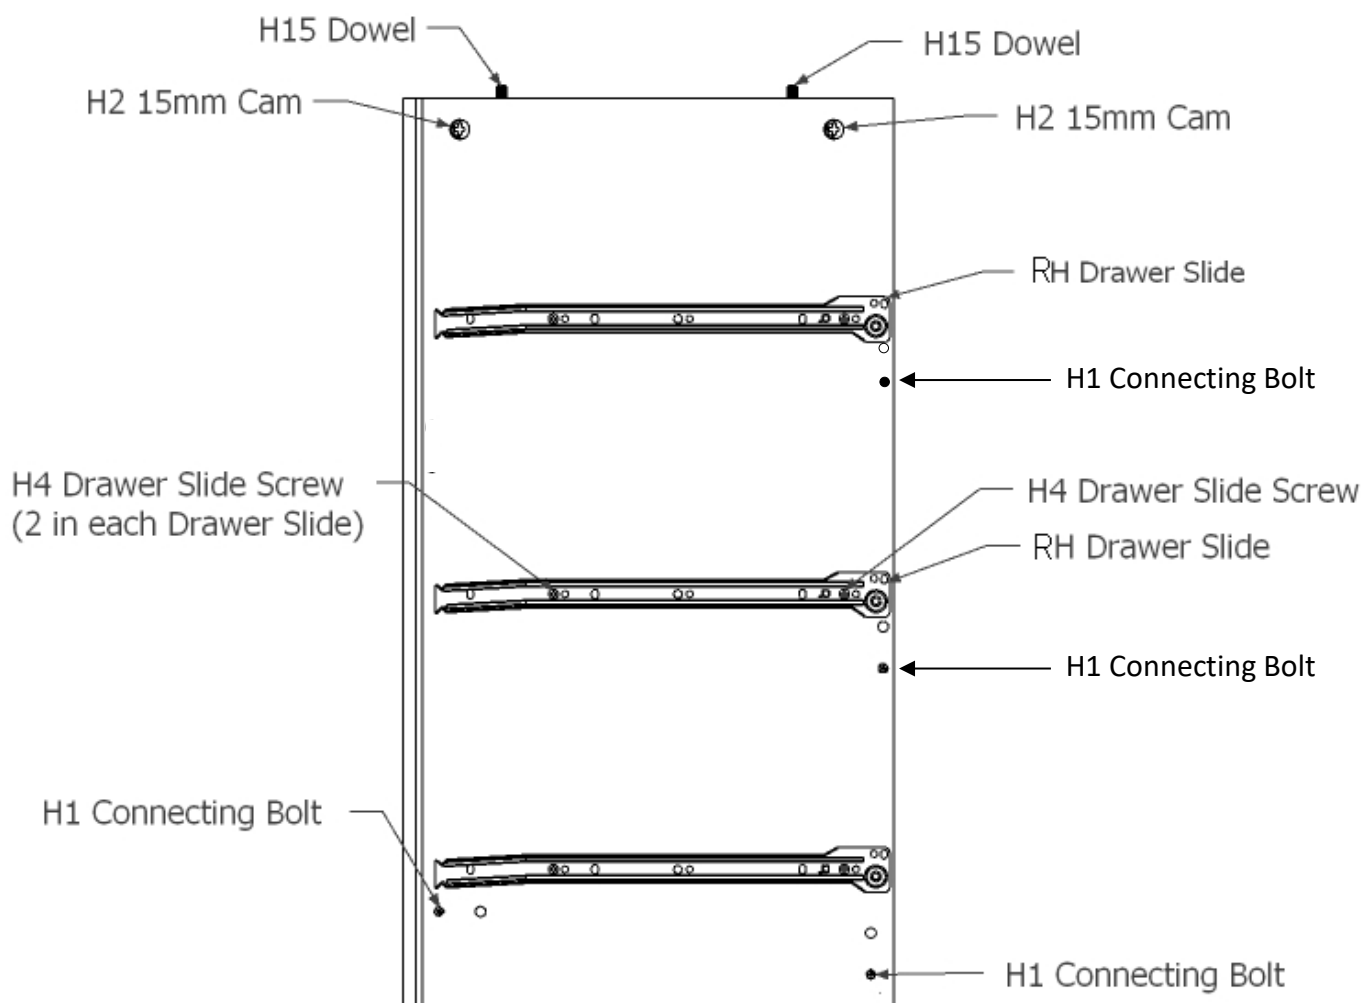

THE EDEN COLLECTION

STEP 3 – TOP

- Lay the Top of the unit finished side down on a clean, clear surface.
- Screw four **H1 Connecting Bolts** into the holes indicated in the drawing below.
- Using the **Pan head screw**, attach the Safety Strap as shown by screwing it first through the **Washer** and then through the eyelet in the Strap, into the hole in the left-hand side of the Top. Make sure that the Strap is positioned so that the tail end falls through the hole in the edge of the Top as shown below.

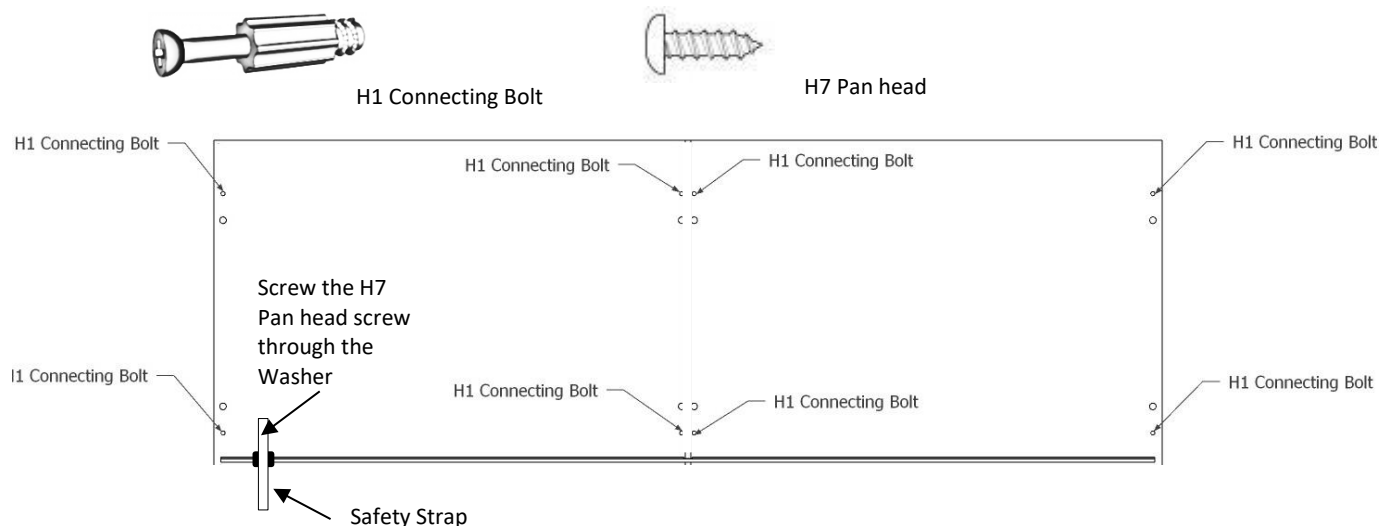

STEP 4 – RAILS AND TOEBOARDS

Your pack will contain:

- 4 x Drawer Rails
- 2 x Toeboards
- 2 x Back Rails

To distinguish the difference between the various parts, please see the Parts List' on page 3. The hardware is installed in each board the same way.

- Install two **H2 Cams** into each piece as indicated




H2 Large Cams

- Push the **H15 Dowels** into each of the boards as indicated



H15 Dowels

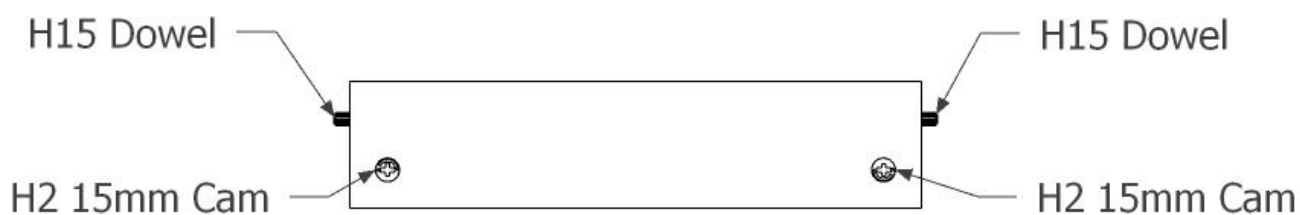


ASSEMBLE THE UNIT

STEP 5 – RAILS AND TOEBOARDS


Please see Parts list to distinguish the difference between the parts.

- Lay the LH End finished side down on a clean surface that is free of anything that may damage the woodgrain finish. A clean carpeted floor is the most ideal for this.
- Position the Drawer Rails and Toeboard and Brace Rails over the Connecting Bolts installed in the End – take note of the drawing below to get them in the correct place. **Ensure the finished surface of the Toeboard faces towards the Front Edge of the unit so the cams cannot be seen when the unit is completed. Make sure the Large Cams face towards the top of the End.**
- Tighten all three Cams in a clockwise direction to lock Rails and Toeboards to the LH End. The Large Cams should turn at least a $\frac{1}{4}$ of a turn.

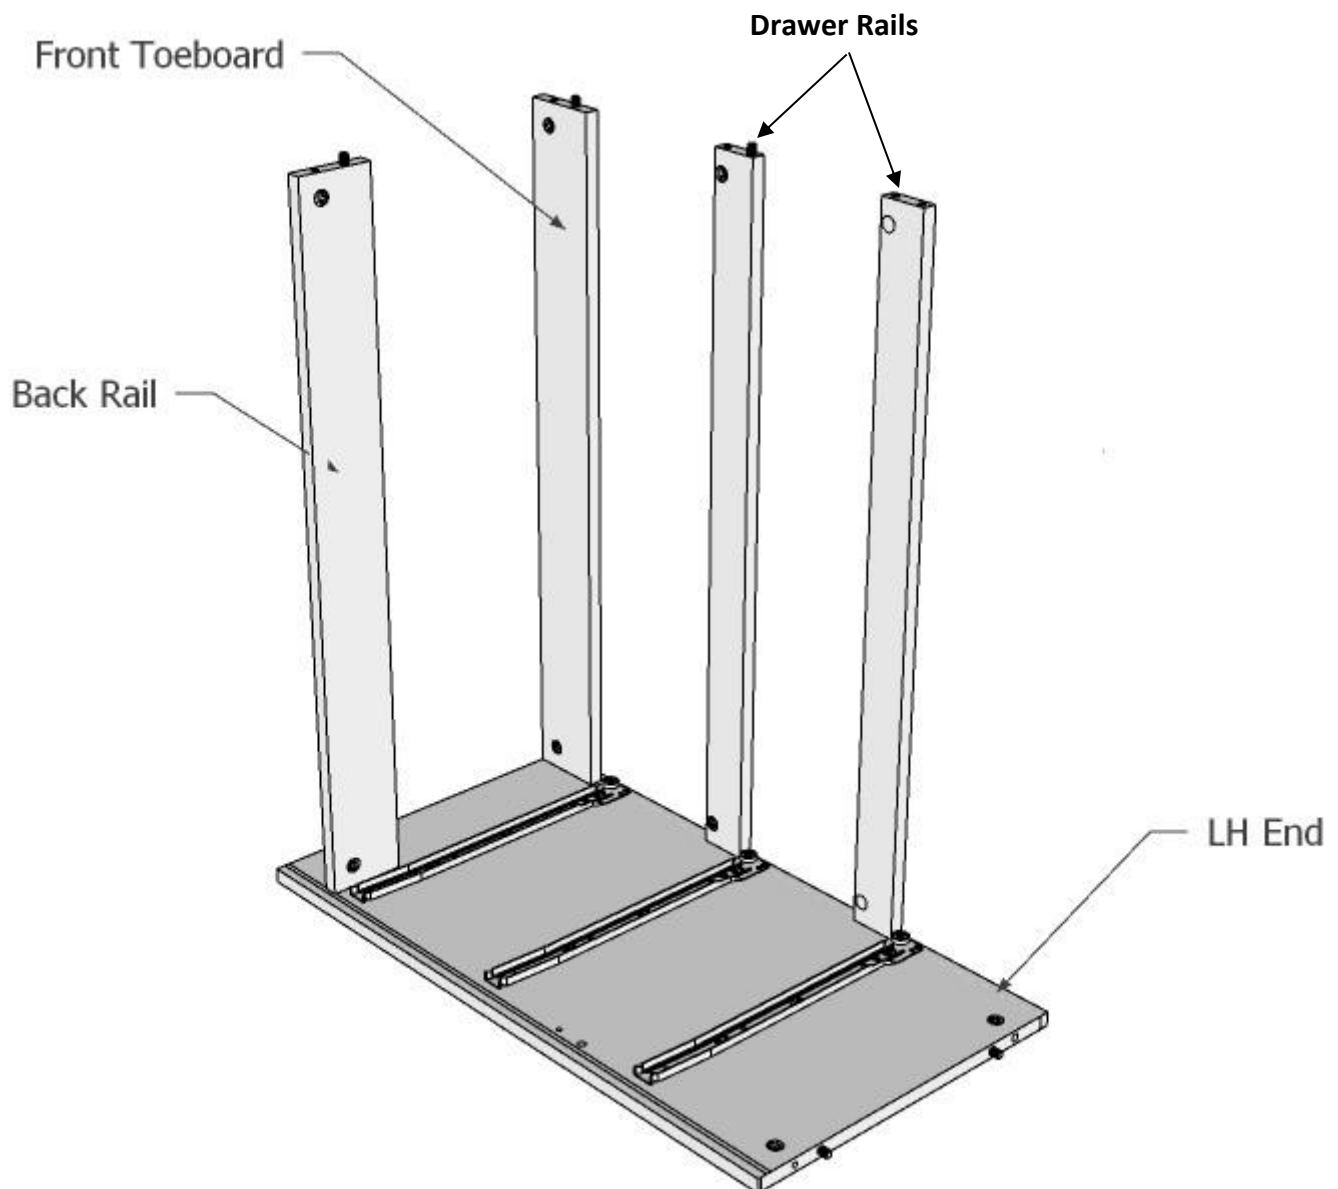

STEP 6 – ATTACH LH DIVISION


- Fit the RH Division to the Rails and Toeboards as shown in the drawing below.
- Lock the RH Division to the Rails and Toeboards by tightening **all** the Cams in the Rails and Toeboards in a clockwise direction

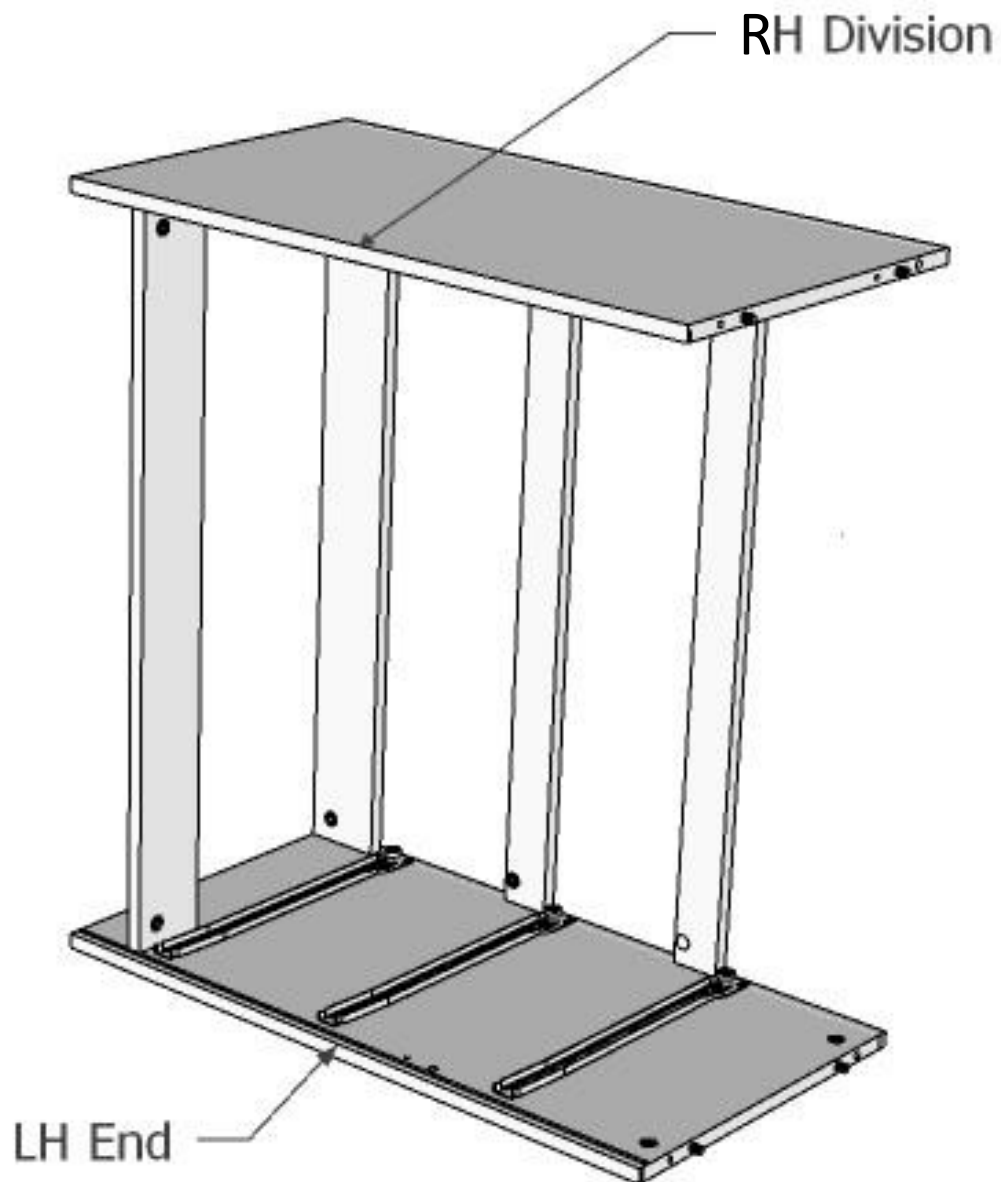

Repeat steps 6 and 7 for the RH side using the RH End and LH Division.


STEP 7 – ATTACH THE LEFT AND RIGHT SIDES

- Carefully place the LH & RH sides of the unit on the Top, fitting the four Connecting Bolts installed in the Top into the Cams in the Ends. Tighten all eight Cams to lock the Top to the Ends.
- Insert a **Connector Sleeve** into the two holes in the divisions indicated below, **note these may need a small knock with a hammer to them push all the way through**. Screw the **15mm Connector Screws** into the **Connector Sleeves** from the other side.
- Tap the four **H37 Nail on Glides** into the bottom of the Ends as indicated below. Space them about **20mm** in from the front and back edges.

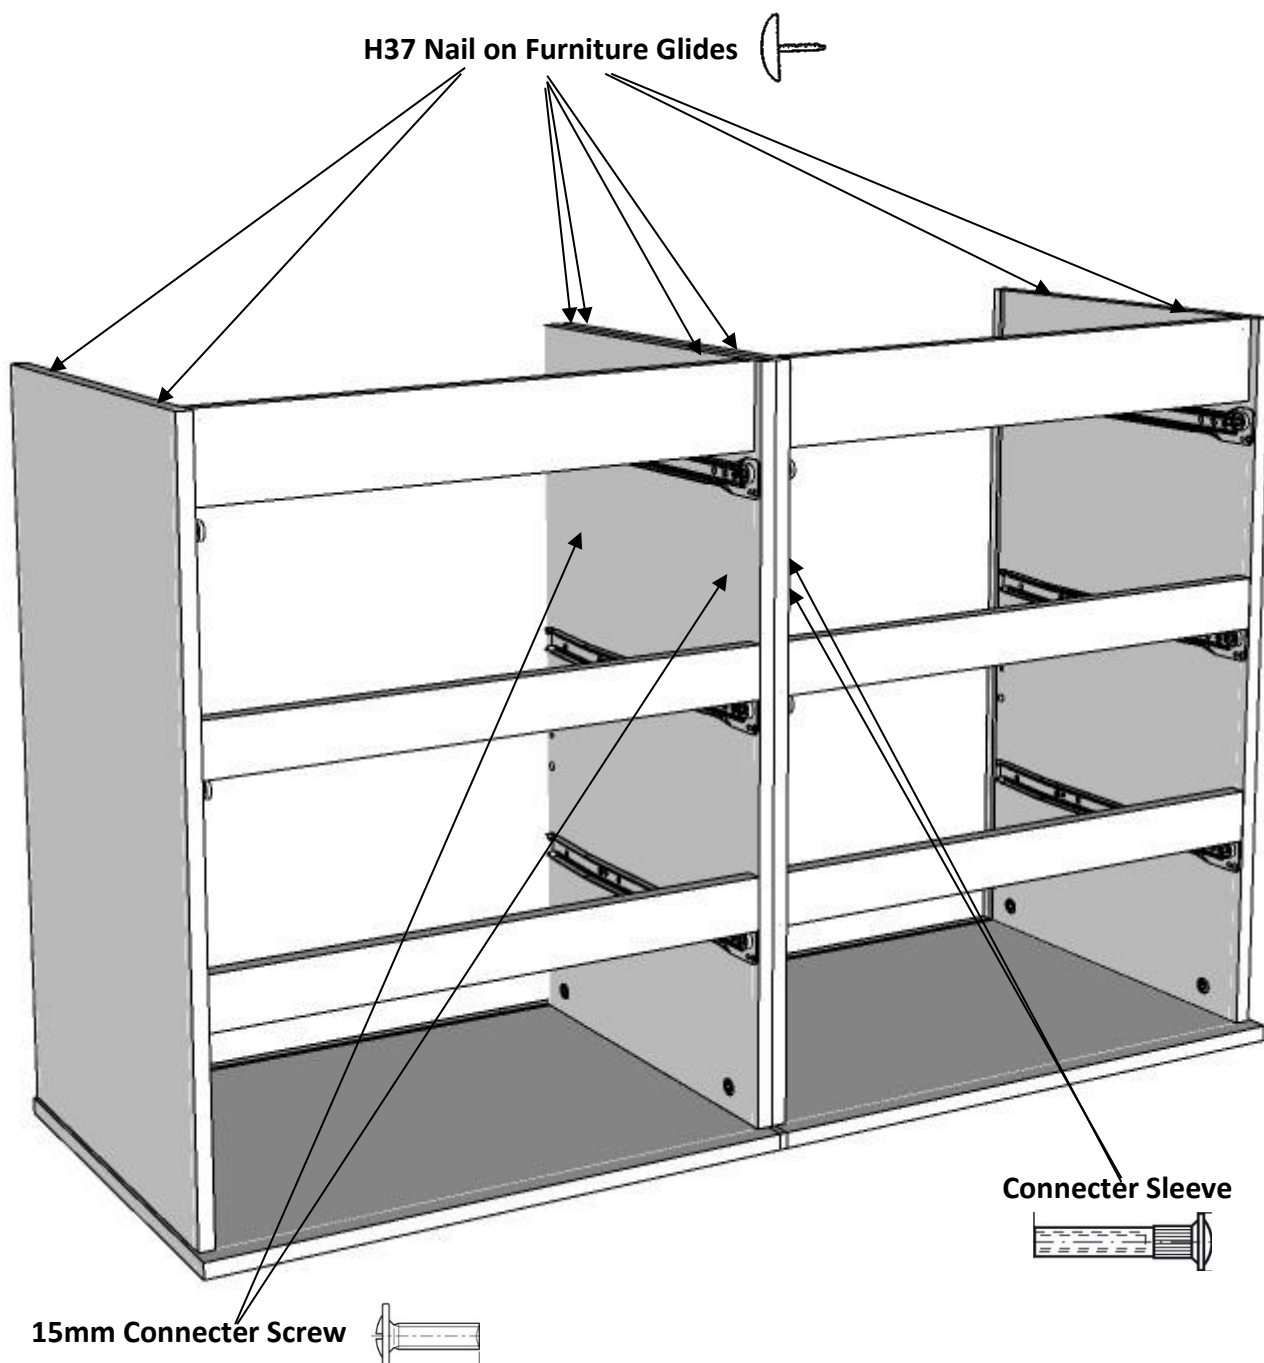


STEP 8 – BACK PANEL

- Slide the Back Panel into place between the two grooves in the Ends. This will fit into the groove in the Top.
- Screw the Back Panel to the Back Rail as shown below, using the H7 Panhead Screws and the predrilled holes. **Carefully stand the unit upright.**

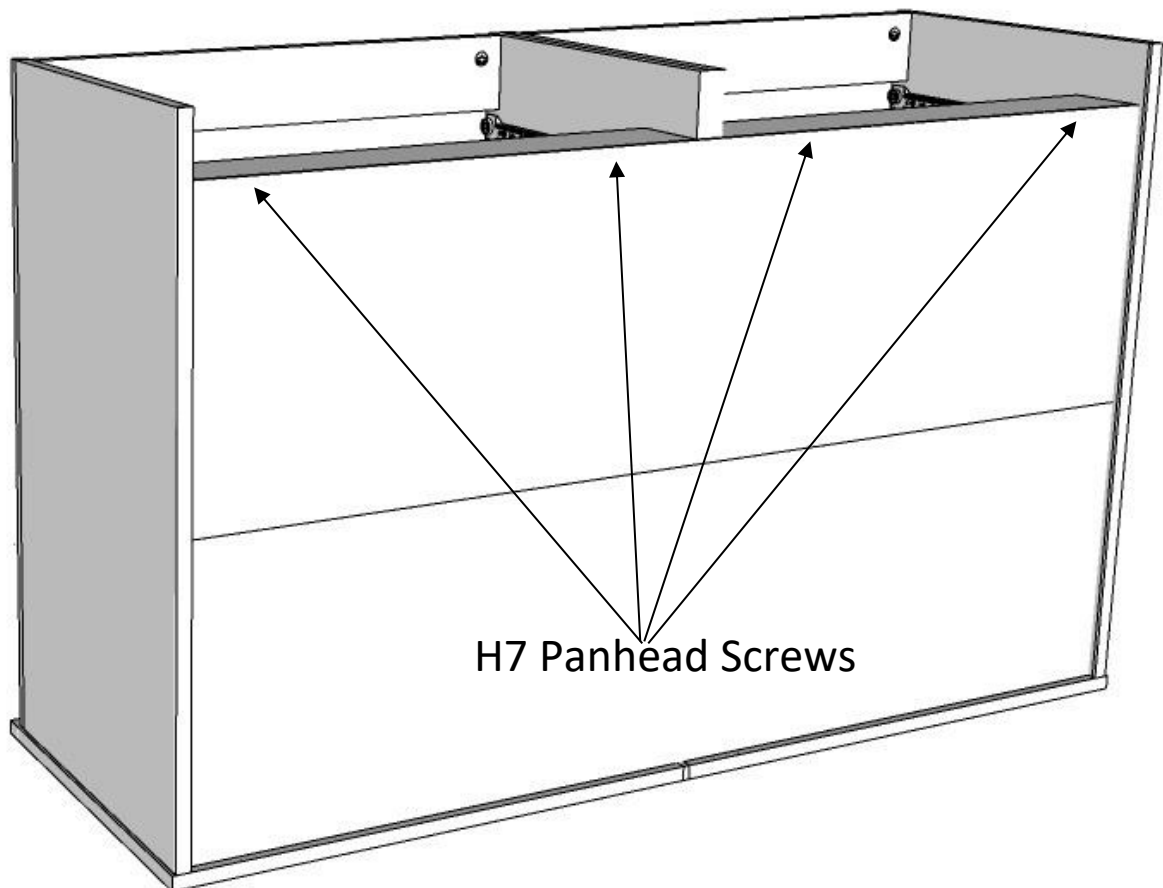



ASSEMBLE THE DRAWERS

Your tallboy has five drawers. All Drawers are constructed from the same parts and are therefore assembled the same way.

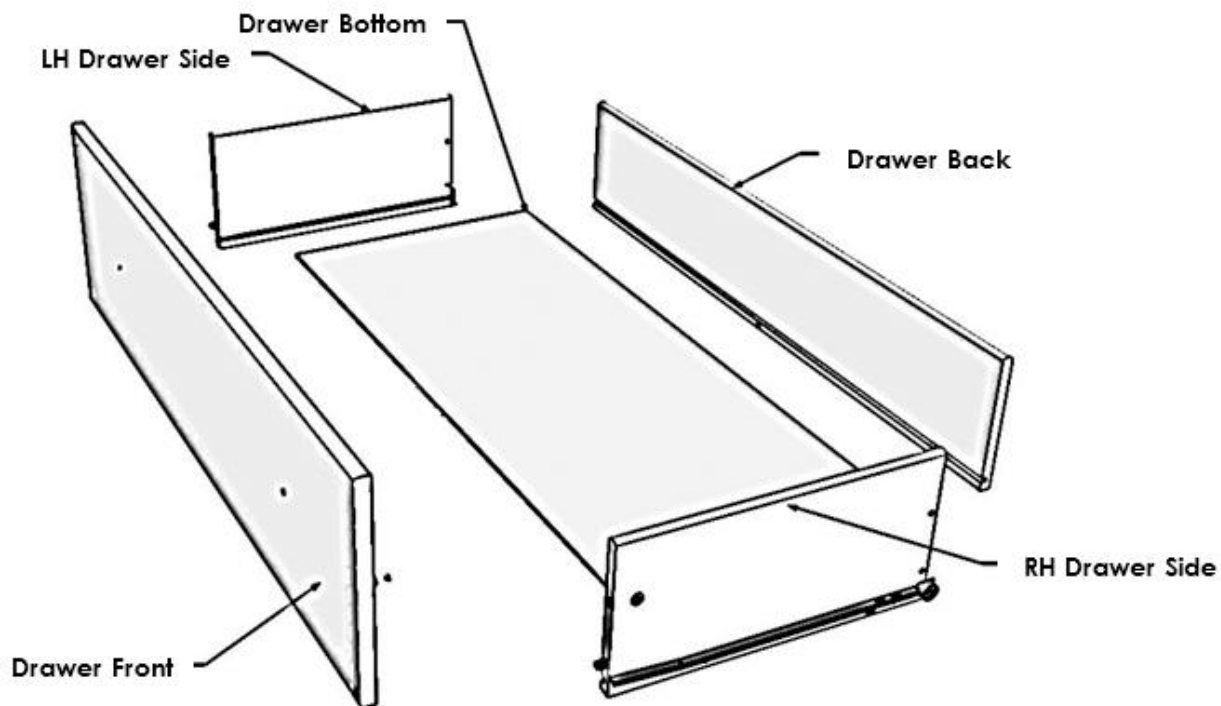


STEP 9 - INSTALL HARDWARE /DRAWERS

- Install the hardware in the drawer parts as shown below. *NOTE: Be sure that the arrow on the Small Cam points to the end of the drawer side nearest it.*

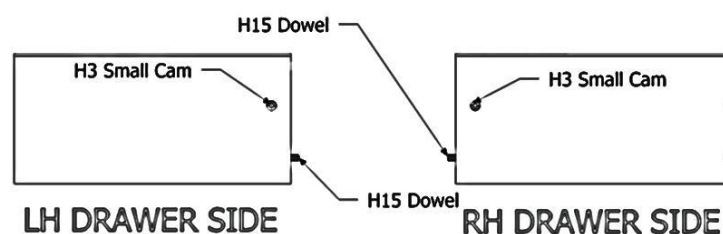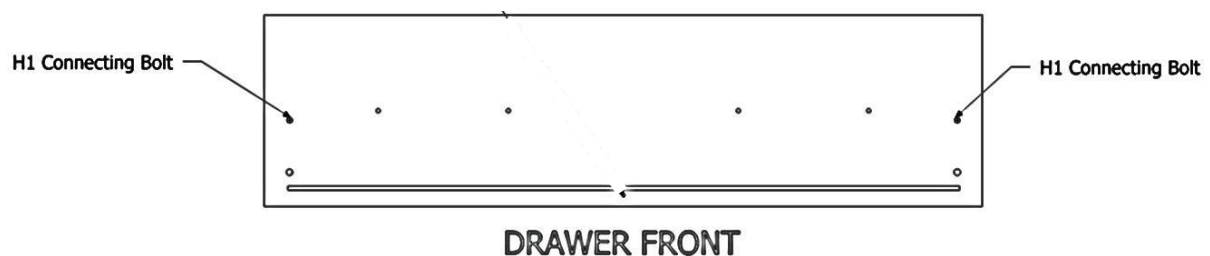


STEP 10 – sides and bottom

- Lay the **Drawer Front** face down on a smooth, clean surface.
- Attach the LH and RH **Drawer Sides** by fitting them into place over the Connecting Bolts installed in the Drawer Front.
- Turn the Small Cams clockwise to lock the Drawer Sides in place.
- Slide the **Drawer Bottom** into place in the grooves in the Drawer Sides and Drawer Front.

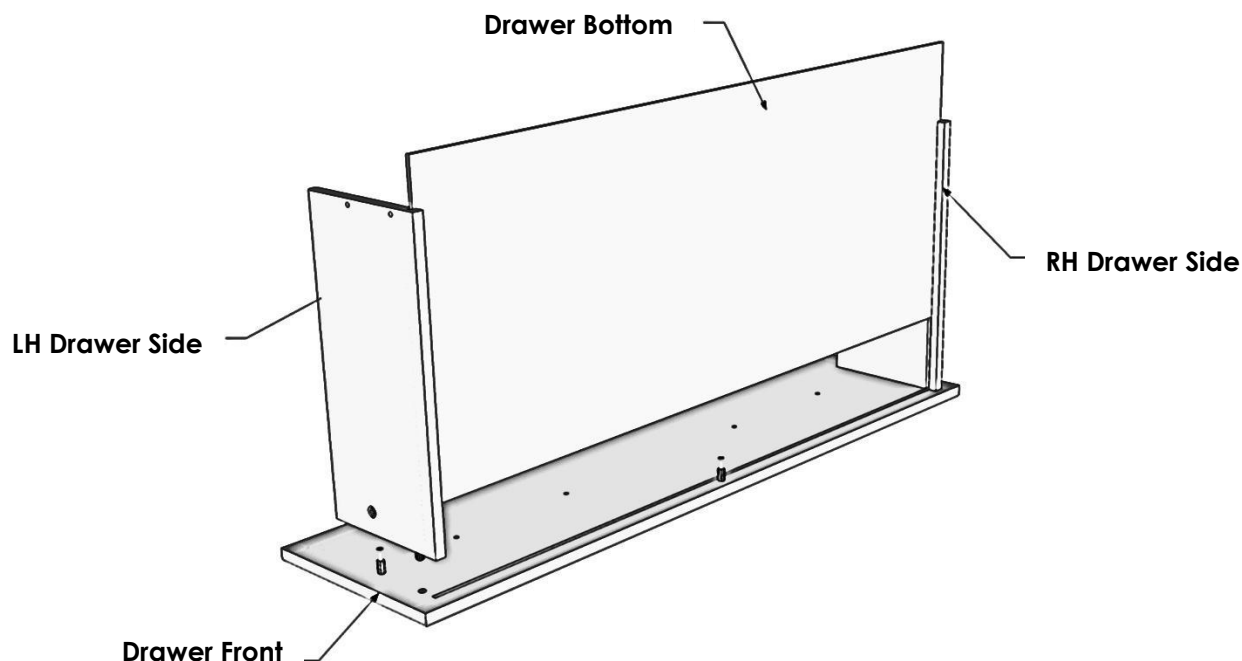


STEP 11 - ATTACH DRAWER BACK

- Fit the **Drawer Back** into place between the Drawer Sides. The groove in the Drawer Back will fit over the end of the Drawer Bottom.
- Secure the Drawer Sides to the Drawer Back with five **H9 Screws** as shown below.

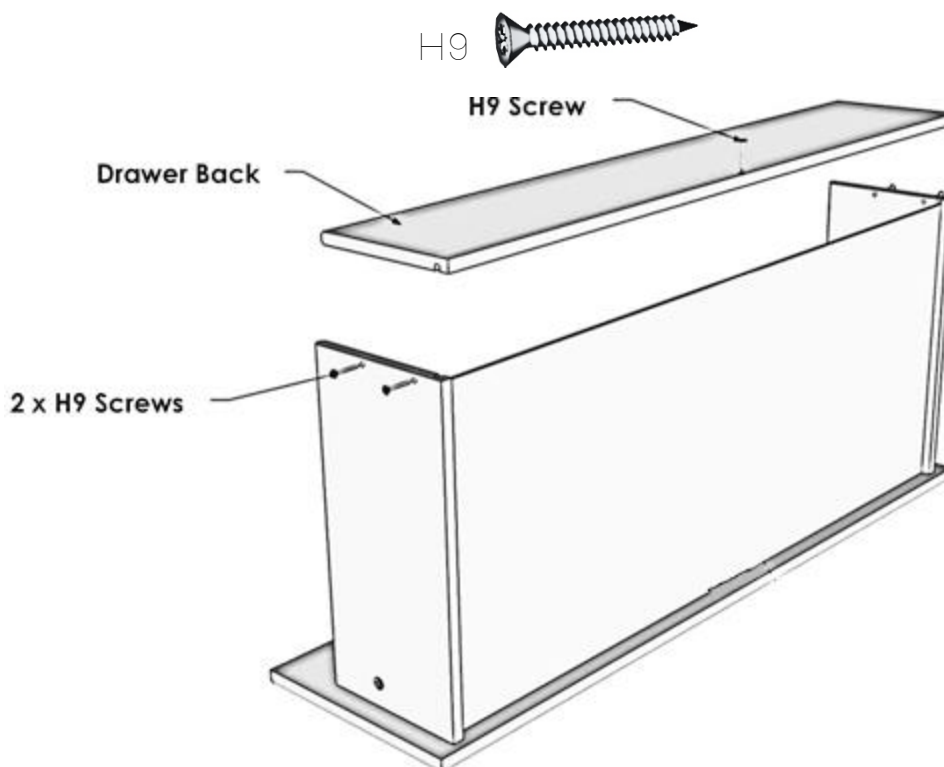


STEP 12 - ATTACH THE DRAWER SLIDES

- Turn the drawer upside-down as shown and attach the **Drawer Slides** (DR and DL) with the four **H6 Small Woodscrews** as shown below. Ensure that the ends of the slides without the wheels are hard up against the back of the drawer front as shown. Each slide requires two screws.

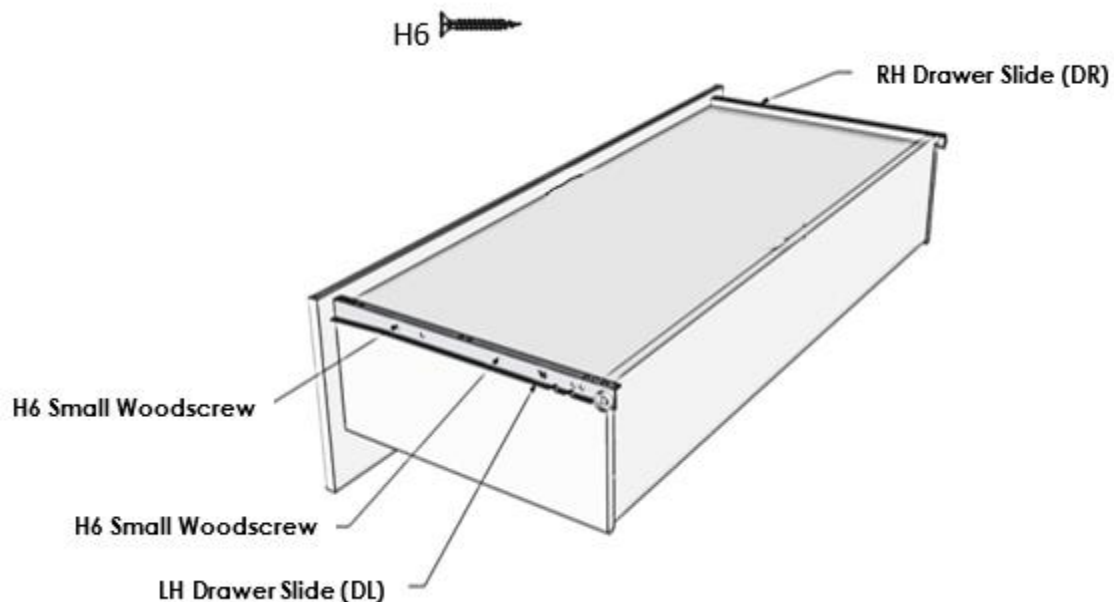


STEP 13 - ATTACH HANDLES AND FIT DRAWERS INTO CABINET

- Fit the drawers into the cabinet. Start with the top drawers and work your way down.

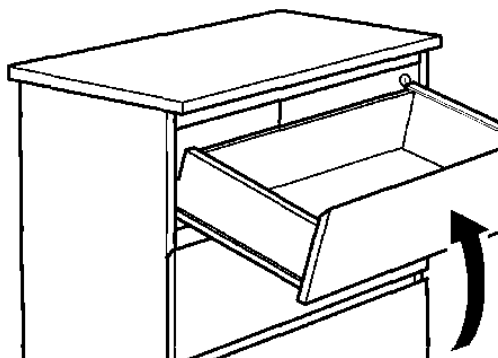


Angle the drawer slightly to ensure that the wheel at the back of the drawer slide goes behind the front wheel on the cabinet slide. Then lift the drawer up and slide it into the channel of the drawer slide.

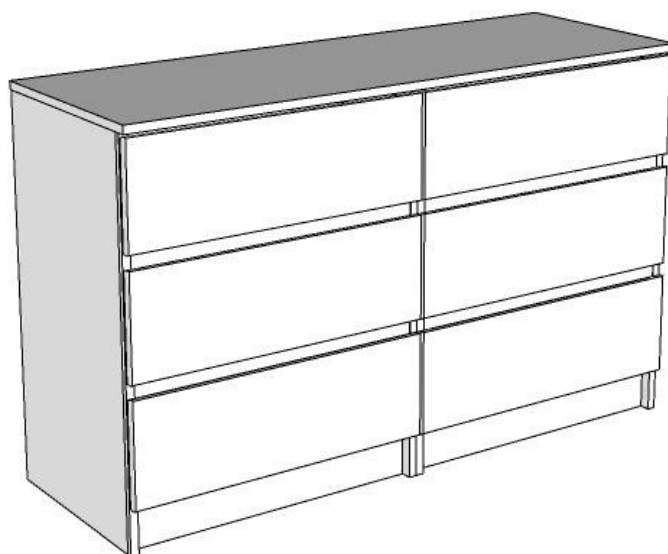

STEP 14 – ATTACH SAFETY STRAP AND SECURE TO WALL

Compac Furniture strongly recommends using a Safety Strap on all furniture, especially if small children are around.

Secure your unit to the wall using the **Safety Strap** and a screw suitable for your wall (**not supplied**). We recommend you screw into a stud. If you cannot locate a stud, use a wall anchor appropriate for your wall.

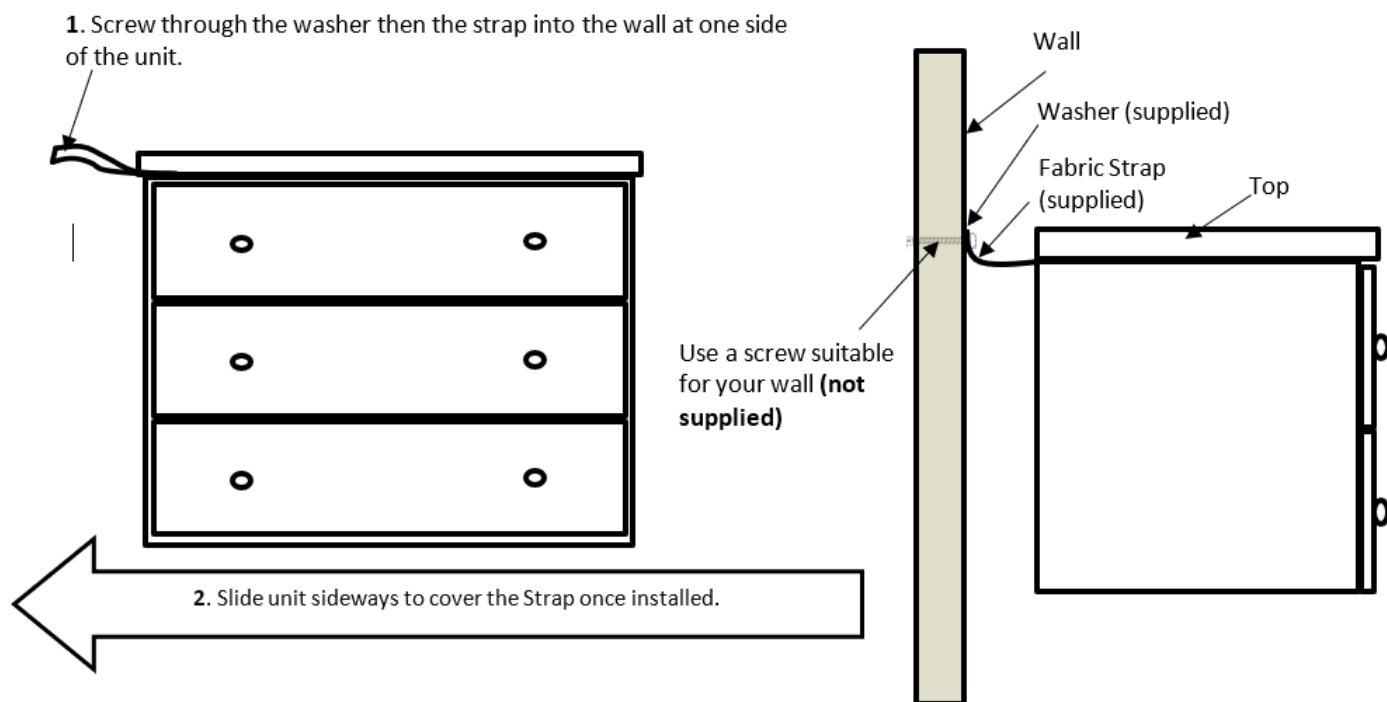

Please note: This is a precautionary measure. The use of tip-over restrains may only reduce but not eliminate, the risk of tip over. Compac Furniture can take no responsibility.

CONGRATULATIONS, YOUR **EDEN 6 Drawer Lowboy** IS NOW COMPLETE.
THANK-YOU FOR SUPPORTING NEW ZEALAND MADE FURNITURE